

3520 EM-II L- SEALER	
COMPONENTS ON SEAL ARM ASSEMBLY	part #
BOLTS, (adjusters for mag/seal wire micro switches)	527-65-40-01
RTV CEMENT (attaches transite strip)	573-10-02-01
SEAL WIRE CONNECTOR KIT	10-16201
SEAL WIRE, (SIX PACK OF WIRES) 3520 FRONT	10-41690-24
SEAL WIRE, (SIX PACK OF WIRES) 3520 SIDE	10-41690-01
TENSIONER ASSY W/CAM, STUDS, SPRINGS, MOUNT-front	10-41211
TENSIONER ASSY W/CAM, STUDS, SPRINGS, MOUNT-side	10-41212
TRANSITE INSULATOR 40" LENGHTS (under seal wires)	10-16041-18
FILM HOLDDOWN COMPLETE FRONT	10-41104-13
FILM HOLDDOWNS COMPLETE SIDE	10-41104-03
SPRING FOR HOLDDOWNS	562-72-47
HB-3	part #
EXTENSION ARM, BURNER SLIDES IN THIS RACK	10-41258
GLOW TIP FOR HB-3 STANDARD TIP	10-41265-20
GLOW TIP LARGER " S" TIP	10-41265-25
HOLEBURNER COMPLETE	HB-3
HOLEBURNER RECPTIBLE (on seal arm)	600-11-02
O-RING HEIGHT ADJUSTER	573-40-13
THUMBWHEEL, BLACK PLASTIC KNOB ON HB-3	568-20-19
SEAL PAD COMPONENTS	part #
SEAL PAD 1" FOAM 36" LENGTH	10-50588-05
TEFLON SLEEVE MATERIAL 12" X 9 YARDS	573-56-64
TEFLON TAPE 3/4 " 36 YARD ROLL	573-56-17-01
TEFLON TAPE 3/4" 10 YARD ROLL	573-56-69
MAGNET ASSEMBLY COMPONENTS	part #
BRACKET, MAGNET HOLDER	10-41340
MAGNET	640-40-09

CONVEYOR ASSEMBLY	part #
ANCHOR NUT FOR TENSION ADJUSTER	10-36181
BELT, TIMING	562-32-01
BELT, CONVEYOR W/LACING & CONNECTOR ROD	10-36231-01
BOLT, TENSION ADJUSTER	527-65-40-01
BRUSHES- FOR CONVEYOR MOTOR	640-45-11
CONVEYOR ASSEMBLY	10-36221-01
CRANK HANDLE	10-16591-02
DRIVE ROLLER	10-36460-01
DRIVE ROLLER BEARING	560-15-09
DRIVE ROLLER SPOCKET	562-22-07
IDLER ROLLER	10-36459-01
LAG TAPE FOR ROLLER	10-16788
LIFT ROD,(on scissor jack replace w/ lift screw) MTB-SL	10-36251-04
LIFT SCREW (threaded rod for crank handle) 3520	10-41263
LIFT SCREW BUSHING, BRASS	10-36229
LIFT SCREW COLLAR	557-07-09
MOTOR, CONVEYOR	615-40-11
BRACKET, (MOTOR MOUNTING)	10-54176
SPROCKET, MOTOR	562-22-06
SPEED CONTROL, CONVEYOR	10-54342
ELECTRICAL COMPONENTS	part #
BRUSHES MOTOR	640-45-11
CAPACITOR, MAGNETS	632-21-22-52-06
CIRCUIT BREAKER, MAIN POWER	610-70-36
CONTROLLER, BELT SPEED	10-54342
CORD, MAIN POWER	10-40172-20
MAGNET	640-40-09
MOTOR, CONVEYOR (requires new mounting bracket)	615-40-11
RELAY SSR	610-50-45
RELAY CUBE	610-50-32
RELAY SOCKET	600-30-31
SWITCH, ON/OFF	610-14-30
SWITCH, ACTUATOR (seal, magnet, conveyor microswitch)	610-18-22
TERMINAL STRIP 4 PIN RECTIFIER	600-50-06
TIMER KNOB (ROUND)	568-03-23
TIMER, CONVEYOR, MAGNETS AND SAFETY CIRCUITS	10-54180-90
TRANSFORMER, HOLEBURNER	640-10-35
TRANSFORMER, SEAL WIRES	640-10-29
TRANSFORMER, STEP DOWN 220 VOLTS TO 120 VOLTS	640-10-48-01

SEAL WIRE TEMP & BALANCE COMPONENTS	part #
SWITCH, CONTACT ADJUSTER DIAL ON FRONT PANEL	610-18-23
KNOB, FOR CONTACT SWITCH	568-30-02
MONITOR WIRE	10-16457
TEMP CONTROL ASSEMBLY	10-40014

FILM CRADLE/SEPERATOR TRAY COMPONENTS	part #
BRACKET, FOR FILM OPENING ROD	10-50551
BRAKE	10-50554
COLLAR, FILM POSITIONING	10-36466
COLLAR, FOR ROLLER INSTALLATION	557-07-09
CRADLE TIE ROD SUPPORT	10-16615-03
FILM CRADLE ASSEMBLY	10-41407
FILM OPENING ROD	10-50553-02
FRONT PLATE, ROLLER MOUNT	10-36389
REAR PLATE	10-36390-01
ROLLER	10-36458-01
ROLLER MOUNTING BRACKET	10-16441
SEPERATOR TRAY STAINLESS STEEL	10-40175-21
THUMB KNOB, BLACK PLASTIC FOR OPENING ROD POSITON	568-20-05
EM MODELS ADDITIONAL COMPONENTS	part #
BOLT, CRANK ARM TO MOTOR	527-32-73-01
BRACKET, MOUNT FOR TDC DETECH SWITCH	10-41434
CLOSER, AIR CYLINDER	570-10-28
CRANK ARM ASSEMBLY, ON DRIVE MOTOR	10-50840
CRANK ARM HUB	10-41632
MOTOR, HEAD DRIVING	615-42-20
SWITCH PUSHBUTTON TO ACTIVATE SEAL HEAD	610-18-76
SWITCH, INTERLOCK ON SAFTEY COVER	610-10-19
TRANSFORMER, STEPDOWN	640-10-48-01
BRAKE ASSEMBLY	562-44-01
BRACKET, FOR TDC SWITCH	10-41434
BRAKE ASSEMBLY	562-44-01
SWITCH SAFETY INTERLOCK	610-18-22
SWITCH TDC DETECTOR	610-18-38
MOTOR SEAL HEAD	615-42-20
TIMER (ANTI TIE DOWN)	10-54180-90